



The Model 161 Series are low-range differential pressure transducers and transmitters. Each unit features a stainless steel pressure sensor, a stainless steel back cover and a plastic enclosure. The electrical terminal screws and adjustment holes are concealed beneath a detachable plastic cap. All units are fully protected against short circuiting and incorrect wiring.

The Model 161 Series are available for pressure range from full scale of 0.1"WC to full scale of 100"WC, Both unidirectional and bidirectional pressure ranges are offered.

The output of the Model 161 Pressure Transducer is available in two versions: 0 to 5VDC and 0 to 10VDC, where 0VDC is true zero without offset. The output of Model 161 Pressure Transmitters is 4 to 20 mA. All units are temperature compensated.

The patented variable capacitance pressure sensor is constructed by stainless steel and glass. That provides excellent performance, corrosion resistance and long-term stability.

Additionally, our unique production setup allows us to accommodate special orders for nonstandard pressure ranges (e.g. -0.5"WC to +3.5"WC).

### Model 161 Specifications

Performance Data	Standard	Optional	Optional
Accuracy* (at room temp)	± 1.0%FS	± 0.4%FS	± 0.25%FS
Non-Linearity (BFSL)	± 0.97%FS	± 0.37%FS	± 0.24%FS
Hysteresis	± 0.20%FS	± 0.10%FS	± 0.05%FS
Non-Repeatability	± 0.10%FS	± 0.10%FS	± 0.05%FS
Thermal Effects (Per °F)	± 0.03%FS	± 0.020%FS	± 0.015%FS
Compensated Range	40 to 170°F (4 to 77°C)		
Maximum Line Pressure	15PSI(100kPa)		
Overpressure	15PSI(100kPa) Proof Pressure. 30PSI(200kPa) Burst Pressure		
Warm-up Time	5 seconds to meet specifications		
Position Effect	Each unit is calibrated in the vertical position. For best accuracy, adjust zero of the unit if it is mounted in other position. It is not necessary to adjust the sensitivity.		

\* RSS of Non-Linearity, Hysteresis, and Non-Repeatability.

### Environmental Data and Physical Description

Operating Temperature	0 to 170°F (-18 to 77°C)
Storage Temperature	-40 to 185°F (-40 to 85°C)
Electrical Termination	Terminal Strip
Pressure Fittings	3/16" O.D. barbed brass for 1/8" I.D. push-on tubing(standard). 6.5mm and 8mm O.D. barbed brass(optional)
Output Adjustment	Accessible under the small cap
Pressure Media	Typically air or similar non-conducting gases
Enclosure	Stainless Steel and PC+ABS Alloy, 94V-0 Rated
Weight	4.0OZ/113g
Installation	See Diagram 1 for outline and dimensions.

### Applications:

- HVAC and VAV Control
- Clean Rooms and Isolation Rooms
- Duct Static Pressure Measurement
- Draft Control and Fume Hood Control
- Furnace Air Flow Control
- Power Plant Air Flow Monitor and Control

### Features

- 15 PSI Over Pressure
- Incorrect Wiring Protection
- Nonstandard Pressure Ranges
- True Zero Output for Voltage Unit
- RoHS Compliant

Visit us Online:

[www.alphainstruments.com](http://www.alphainstruments.com)

E-mail: [sales@alphainstruments.com](mailto:sales@alphainstruments.com)

**978-264-2966**

# Model 161 Specifications

## Electrical Data (Voltage)

Circuit 3-Wire (+EXC, -EXC, OUTPUT), Protected from Miswiring  
 Excitation 12-32VDC/12-30VAC  
 Output\* 0-5VDC, 0-10VDC  
 Output Impedance  $\leq 5.0$  OHMS

\* Zero output: factory set at  $\pm 35$ mV(0-5VDC),  $\pm 70$ mV(0-10VDC)  
 Span output: factory set at  $\pm 35$ mV(0-5VDC),  $\pm 70$ mV(0-10VDC)  
 Calibrate with a 50K OHM load, operable with a load greater than 5K OHM for 0-5VDC output, greater than 10K OHM for 0-10VDC output.

## Electrical Data (Current)

Circuit 2-Wire (+EXC, -EXC), Protected from Miswiring  
 Excitation 12-32VDC (see diagram 2 for maximum loop resistance)  
 Output\*\* 4-20mA  
 Bidirectional Output at Zero 12mA as standard  
 External Load 0-1000 OHM

\*\* Zero output: factory set at  $\pm 0.11$ mA  
 Span output: factory set at  $\pm 0.11$ mA  
 Calibrated with a 250 OHM load and a 24VDC supply voltage.

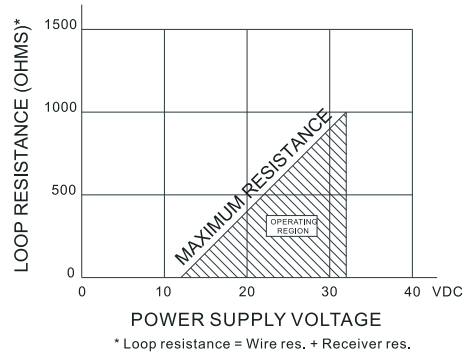


Diagram 2

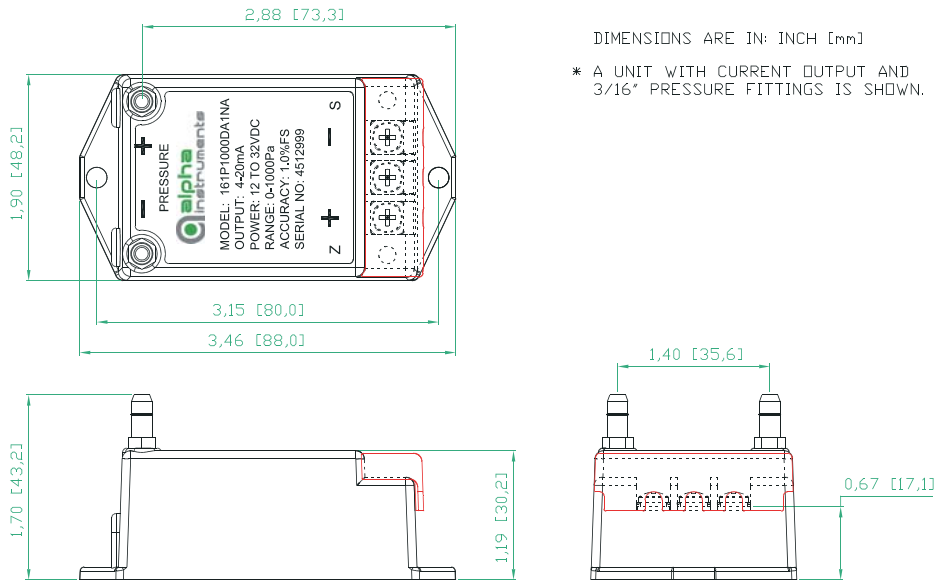


Diagram 1

## Ordering Information

Code all blocks in table.

Example: 161W00R1DA1NA for 161 Transmitter, 0-0.1 in. WC Range, Unidirectional, 4-20mA Output, 1.0% Accuracy, No Calibration Certificate, 3/16" Barbed Brass Pressure Fittings.

Model	Unit	Range	Pressure Type	Output	Accuracy	Certificate	Pressure Fitting
161	P: Pascal W: in. W.C.	NNNN	Differential D: Unidirectional B: Bidirectional	A: 4-20mA B: 0-5VDC C: 0-10VDC	1: 1.0%FS 4: 0.4%FS 2: 0.25%FS	Y (with) N (without)	A: 3/16" B: 8mm E: 6.5mm (Barbed Brass)
Pressure Unit/Range/Type							
in. W.C. (Unidirectional)		in. W.C. (Bidirectional)		Pascal (Unidirectional)		Pascal (Bidirectional)	
W00R1D=0~0.1 in. W.C.		W00R5B=0~ ± 0.05 in. W.C.		P0025D=0~25 Pa		P0010B=0~ ± 10 Pa	
W0R25D=0~0.25 in. W.C.		W00R1B=0~ ± 0.1 in. W.C.		P0050D=0~50 Pa		P0025B=0~ ± 25 Pa	
W00R5D=0~0.5 in. W.C.		W0R25B=0~ ± 0.25 in. W.C.		P0100D=0~100 Pa		P0050B=0~ ± 50 Pa	
W0001D=0~1 in. W.C.		W00R5B=0~ ± 0.5 in. W.C.		P0250D=0~250 Pa		P0100B=0~ ± 100 Pa	
W02R5D=0~2.5 in. W.C.		W0001B=0~ ± 1 in. W.C.		P0500D=0~500 Pa		P0250B=0~ ± 250 Pa	
W0005D=0~5 in. W.C.		W02R5B=0~ ± 2.5 in. W.C.		P1000D=0~1000 Pa		P0500B=0~ ± 500 Pa	
W0010D=0~10 in. W.C.		W0005B=0~ ± 5 in. W.C.		P2500D=0~2500 Pa		P1000B=0~ ± 1000 Pa	
W0025D=0~25 in. W.C.		W0010B=0~ ± 10 in. W.C.		P5000D=0~5000 Pa		P2500B=0~ ± 2500 Pa	
W0050D=0~50 in. W.C.		W0025B=0~ ± 25 in. W.C.		P100CD=0~10000 Pa		P5000B=0~ ± 5000 Pa	
W0100D=0~100 in. W.C.		W0050B=0~ ± 50 in. W.C.		P250CD=0~25000 Pa		P100CB=0~ ± 10000 Pa	

\* Specifications subject to change without notice. If you don't see what you need here, please contact us.